



RONDA is a supplier of watch movements including their operating instructions. Please refer to the watch retailer, service centre or manufacturer, should you have any questions regarding the watch. All relevant contact information can be found in your sales and/or guarantee documents.

Battery type: 395 (diameter 9.5mm x 2.6mm / SR 927 SW)
Accuracy: +20 / -10 seconds per month



Description of the display and control buttons

Display elements

- Second hand
- Minute hand
- Hour hand
- Centre stop-second
- Minute counter
- Date

Control buttons

- Push button A
- Crown
- Push button B

Chronograph: Basic function

(Start / Stop / Reset)

Example:

- Start:** Press push-button A.
- Stop:** to stop the timing, press push-button A once more and read the three chronograph hands: 1h / 20min / 10 sec.
- Zero positioning:** Press push-button B. (The three chronograph hands will be reset to their zero positions).

Adjusting the chronograph hands to zero position

Example:
One or several chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Pull out the crown to position III (all 3 chronograph hands are in their correct or incorrect zero position).
- Keep push-buttons A and B depressed simultaneously for at least 2 seconds (the centre stop-second rotates by 360° → corrective mode is activated).

Adjusting the centre stop second

Single step: A 1 x short
Continuous: A long

Adjusting the next hand B

Adjusting the hour counter hand (position 6h)

Single step: A 1 x short
Continuous: A long

Adjusting the next hand B

Adjusting the minute counter hand (position 9h)

Single step: A 1 x short
Continuous: A long

Returning the crown to position I
Termination of the chronograph hands adjustment (can be carried out at any time).

Setting the time

- Pull out the crown to position III (the watch stops).
- Turn the crown until you reach the correct time 8:45.
- Push the crown back into position I.

Please note:
* In order to set the time to the exact second, * must be pulled out when the second hand is in position «50» (I). Once the hour and minute hands have been set, * must be pushed back into position I at the exact second.

Setting the date (quick mode)

- Pull out the crown to position II (the watch continues to run).
- Turn the crown until the correct date 11 appears.
- Push the crown back into position I.

Please note:
During the date changing phase between 9 PM and 12 PM; the date must be set to the date of the following day.